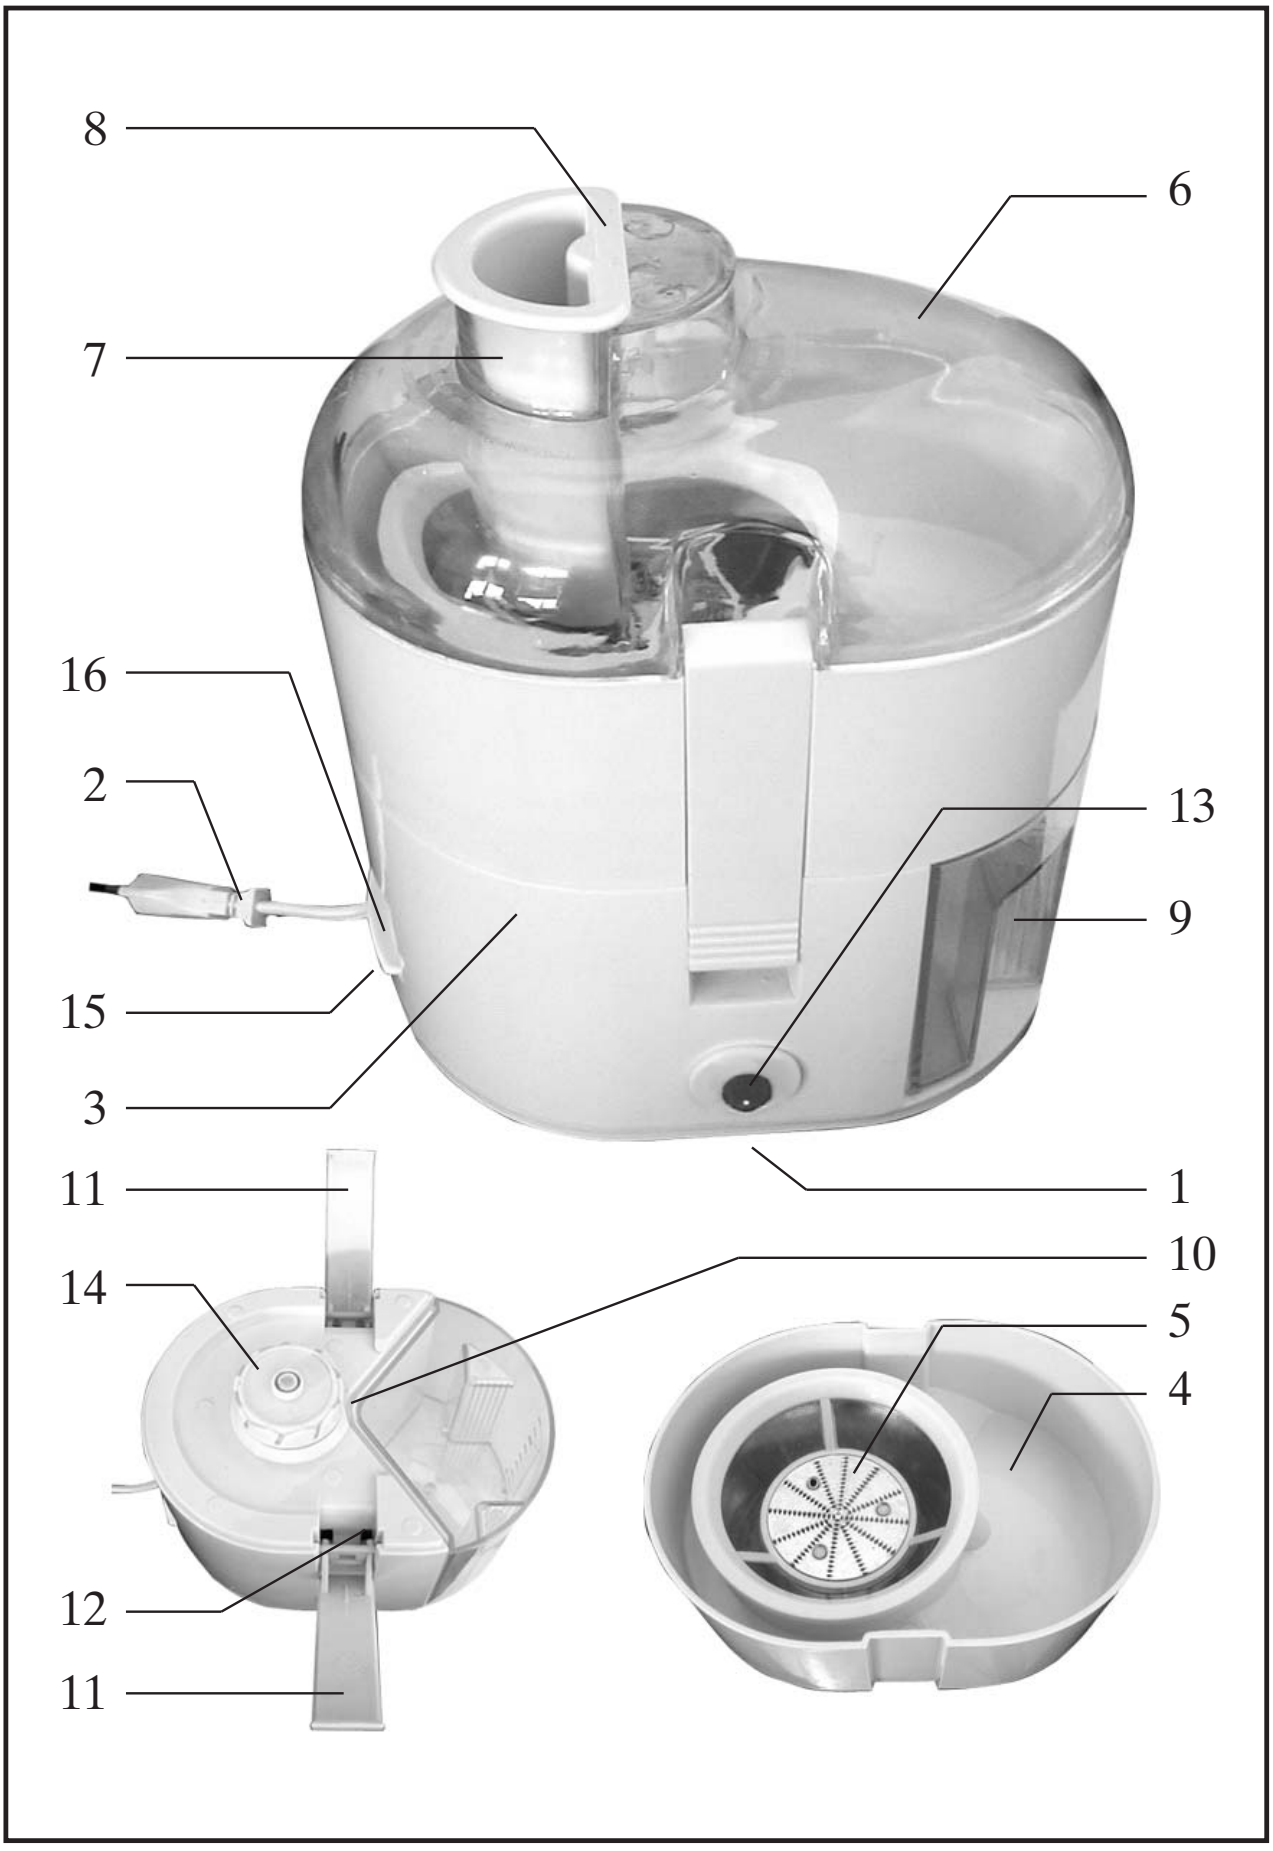
8
6
7
16
2
13
9
15
3
1
11
10
14
5
4
12
11

GB

Juicer

Dear Customer,
Before using the appliance, the user should read the following instructions carefully.

Connection to the mains supply
Make sure that the supply voltage corresponds with the voltage marked on the rating label of the appliance. This product complies with the directives which are binding for the CE-labelling.

Familiarisation
1. Rating label
2. Power cord with plug
3. Motor block
4. Pulp container
5. Filter and grating plate insert
6. Lid
7. Feeder tube
8. Pestle
9. Juice container
10. Juice outlet
11. Holding tabs
12. Safety switch
13. On/Off switch
14. Drive shaft coupling
15. Power cord storage compartment
16. Storage compartment cover

Important safety instructions
- Before the appliance is used, the main unit as well as any attachments fitted should be checked thoroughly for defects. Should the appliance, for instance, have been dropped onto a hard surface, it must not be used any longer: even invisible damage may have adverse effects on the operational safety of the appliance.
- This appliance is not intended for use by any person (including children) with reduced physical, sensory or mental capabilities, or lacking experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
  Children should be supervised to ensure that they do not play with the appliance.
- Children do not recognize the dangers that may occur when operating electrical appliances. Therefore keep such appliances away from children.
- Do not allow the appliance to operate without supervision.
- For safety reasons, use the pestle at all times when feeding fruit or vegetables into the feeder tube. Under no circumstances use your hands or fingers.
- The motor may continue to run for a few seconds after the appliance is switched off.
- **Always wait until the motor has come to a complete standstill before opening the lid.**
- Do not allow the appliance or its power cord to touch hot surfaces or to come into contact with any heat sources.
- **Always remove the plug from the wall socket**
  - after use,
  - in case of any malfunction,
  - before cleaning the appliance.
- When removing the plug from the wall socket, never pull on the power cord. Do not let the power cord hang free.
- Do not use the appliance, if the rotating filter and grating plate insert shows any sign of damage.
- No responsibility is accepted if damage results from improper use, or if these instructions are not complied with.
- This appliance is intended for domestic use only and not for commercial applications.
- In order to comply with safety regulations and to avoid hazards, repairs of electrical appliances must be carried out by qualified personnel, including the replacement of the power cord. If repairs are needed, please send the appliance to one of our customer service departments.

The addresses can be found in the appendix to this manual.

Useful information

- This appliance allows natural, vitamin-rich juices to be extracted from fruit and vegetables.
- To preserve the maximum vitamin content, the juices are best drunk fresh, ie immediately after extraction.
  Freshly extracted juice should be stored only in a covered container inside a refrigerator.
- It is advisable to use glass or plastic containers, since metal containers might affect the taste.
- After cleaning, cut up the fruit or vegetable so that it fits down the feeder tube.
  Fruits such as oranges, lemons or grapefruit must be peeled first. Before extracting juice from fruit or vegetables with seeds or stones, these must be removed.
- The following fruits and vegetables are not suitable for juice extraction:
  Bananas, figs, grapes, avocados, aubergines, raspberries, blackberries, currants, elderberries, rhubarb, blueberries, cranberries, beetroot etc.

Short-term operation

The appliance has been designed for short-term operation only, ie, it should not be operated continuously for more than 3 minutes. Switch off the appliance afterwards and allow the motor to cool down before switching it on again.

Before using for the first time

- Before the appliance is used for the first time, it must be cleaned as described in the section ***General Cleaning and Care***

Operation

- Attach the pulp container to the motor block.
  Fit the filter and grating plate insert onto the drive shaft coupling and push downwards.
- Close the lid and secure it with the holding tabs. If the tabs are not locked into place, a built-in safety device will prevent the appliance from operating.
- Place the juice container directly underneath the juice outlet.
- Insert the plug into the wall outlet and use the on/off switch to switch on the juicer.
- Feed the cleaned and pre-cut fruit or vegetable pieces down the feeder tube while the motor is running. Use the pestle and lightly push the pieces down. Excessive pressure may result in damage to the motor or grating plate.
- When processing large quantities of fruit or vegetables, the pulp and juice containers must be emptied from time to time as necessary.
- After use, switch the appliance off and remove the plug from the wall socket.
- The power cord can be kept in the storage compartment built into the motor block. To facilitate removing or stowing the power cord, the compartment cover can be opened by sliding it upwards.

General Cleaning and Care

- Always remove the plug from the wall socket and allow the appliance to cool down before cleaning.
- **Please note: the filter and grating plate insert has sharp projections. To prevent injuries, special care must be taken when handling these parts**.
- Do not use abrasives, harsh cleaning solutions or hard brushes for cleaning.
- To avoid the risk of electric shock, do not clean the motor block with water and do not immerse it in water.
- The exterior of the motor block may be cleaned with a slightly damp, lint-free cloth.
- The pulp container, filter and grating plate insert, lid, pestle and juice container

can be cleaned using hot water and a mild detergent.

Disposal

Do not dispose of old or defective appliances in domestic garbage, but only through public collection points.

Guarantee

This product is guaranteed against defects in materials and workmanship for a period of two years from the date of purchase. Under this guarantee the manufacturer undertakes to repair or replace any parts found to be defective, providing the product is returned to one of our authorised service centres. This guarantee is only valid if the appliance has been used in accordance with the instructions, and provided that it has not been modified, repaired or interfered with by any unauthorised person, or damaged through misuse.

This guarantee naturally does not cover wear and tear, nor breakables such as glass and ceramic items, bulbs etc. If the product fails to operate and needs to be returned, pack it carefully, enclosing your name and address and the reason for return. If within the guarantee period, please also provide the guarantee card and proof of purchase.